

Desktop Charger (140W)



1. Introduction

Thank you for purchasing the Desktop Charger (140W). This charger is designed to efficiently charge multiple devices simultaneously with high power output. Please read this manual carefully before using the charger to ensure proper operation and safety.

2. Specifications

- Model: Desktop Charger (140W)
- Input: AC 100-240V, 50/60Hz
- Total Power Output: 140W

➤ *USB-C Ports*

- Type-C1/C2/C3/C4: 140W each

➤ *Combined Outputs*

- Type-C1 + C2: 65W + 65W
- Type-C1/C2 + C3/C4: 100W + 30W
- Type-C3 + C4: 65W + 65W
- Type-C1 + C2 + C3/C4: 65W + 30W + 30W
- Type-C1/C2 + C3 + C4: 65W + 30W + 30W
- Type-C1 + C2 + C3 + C4: 65W + 20W + 20W + 20W

➤ *Physical Dimensions*

- Max Size: 84mm x 33mm x 70mm
- Plug Type: EU

3. Features

- High Power Output: Capable of delivering up to 140W to charge multiple devices efficiently.
- Multi-Port Charging: Equipped with four USB-C ports to charge multiple devices simultaneously.
- Compact Design: Sleek and portable, perfect for use at home, office, or while traveling.
- EU Plug: Suitable for use with European power outlets.

4. Instructions for Use

- Connecting to Power:
 - Plug the charger into an AC outlet (100-240V, 50/60Hz).
 - Ensure the power indicator light is on.
- Charging Devices:
 - Connect your devices to the appropriate USB-C ports.
 - The charger will automatically detect and deliver the optimal power for each connected device.
- Charging Combinations:
 - Use various combinations of the USB-C ports based on the power requirements of your devices (refer to the specifications section for details).

5. Safety Information

- Overheat Protection: The charger is equipped with an overheat protection mechanism.
- Overcurrent Protection: Automatically limits the current to prevent damage to connected devices.

- Short-Circuit Protection: Shuts down the charger in case of a short circuit to ensure safety.

6. Troubleshooting

- No Power:
 - Ensure the charger is securely plugged into a working AC outlet.
 - Check if the power indicator light is on.
- Device Not Charging:
 - Ensure the device is properly connected to the charger.
 - Verify that the charger's power output matches the device's requirements.

7. Safety Instructions

- Read all instructions before using the charger.
- Use the charger only as intended.
- Do not expose the charger to water, moisture, or extreme temperatures.
- Keep the charger out of reach of children.
- Disconnect the charger from the power source when not in use.
- Do not disassemble or modify the charger in any way.
- Use only the provided power cable or certified replacements.

8. Maintenance

- Keep the charger dry and avoid exposure to moisture.
- Clean the charger with a dry cloth. Do not use abrasive cleaners or solvents.
- Store in a cool, dry place when not in use.