

### Dviced MagSafe iPhone 17 Pro Max Clear Case C – White



The **Dviced MagSafe iPhone 17 Pro Max Clear Case C – White** is designed for those who want to protect their phone while still seeing the original design of the iPhone. The clear case provides a clean look, and the delicate white details create a sleek, modern look without distracting from the device.

The special feature of the case is the C-shaped MagSafe magnet, which is the result of conscious design. This allows the Apple logo to remain freely visible, not obscured by a full magnetic ring, yet provides a secure and stable magnetic attachment for MagSafe chargers and accessories. Thus, functionality and aesthetics are perfectly balanced.

The durable yet flexible material provides effective protection against scratches, minor bumps and drops that occur during everyday use. The precise fit makes it easy to press the buttons and the connectors and speakers to be used without obstacles.

The package also includes a tether tab, which is a practical solution if you want to connect your phone to a wristband, neck strap or other fastener – giving you extra security when traveling, working or actively using it.

#### Why is it a good choice?

- Designed specifically for iPhone 17 Pro Max.
- Transparent design with delicate white details.
- A C-shaped MagSafe magnet that does not cover the Apple logo.
- Stable MagSafe compatibility with chargers and accessories.
- Reliable protection against everyday damage.
- Accessory tether tab for safer carrying.
- Easy to put on, precise fit.

## Instructions for use

### Fitting the case

1. Place your iPhone 17 Pro Max in the bottom of the case.
2. Gently press in the top of the phone until it snaps completely into place.
3. Check that the case fits correctly on all sides.

### Using MagSafe

- The C-shaped magnet allows you to securely attach your MagSafe chargers and accessories.
- Place the charger or accessory on the back of your phone, where it will automatically adjust to the correct position.
- Charging and using accessories are uninterrupted without removing the case.

### Using Tether tab

1. Place the tether tab between the case and the phone at the cutout of the charging port.
2. Fit your phone back into the case.
3. Attach the strap or cord to the tether tab for safe carrying.

### Cleaning and care

- The case can be cleaned with a soft, slightly damp cloth.
- For heavier dirt, lukewarm water and a mild detergent can be used.
- Avoid alcoholic and aggressive chemicals to keep the transparent surface beautiful for a long time.

### Useful information

The case provides reliable protection in everyday use, but at the same time it is not a substitute for protective cases designed for extreme conditions.