





# DV530003 Magnetic aluminium keyboard - US

**User Manual** 


# **DVICED ■**

## Magnetic suction installation






### Connectivity

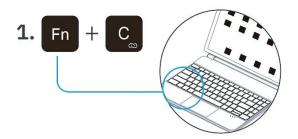

Turn on the keyboard power, and then press the Fn+C keys on the keyboard. The keyboard will be in a waiting search state for three minutes.

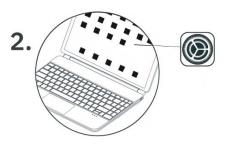

Open the settings for your iPad.

# Bluetooth ON (

Turn on Bluetooth in your iPad and leave Bluetooth in 'ON' search mode.

# **Dviced Keyboard**




Search for the keyboard wireless signal "Dviced Keyboard" on other devices on the iPad machine, click on "Connect", and the wireless signal light remains constantly on.

Note: Starting from the second time, Bluetooth will automatically connect when turned on.



## Charging and maintenance

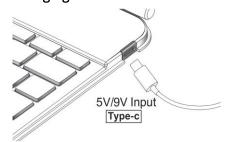

#### Switch button

Switch button Move up and down to turn on/off




Maintain it at room temperature and charge it normally for a long time. No, you need to charge the keyboard in a timely manner (once every 2 months).

## Special instructions for indicator lights


Blue light: Flashing when wireless pairing is in progress; The blue light remains on when pairing is successful.

Blue light: When in capital letters, the light remains on, and when in lowercase letters, the light goes off.

Blue light: Low battery flashing, red light frequently on during charging. If fully charged, the red light will not light up.

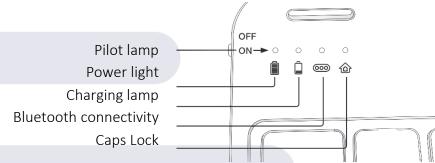

### Hotkey function

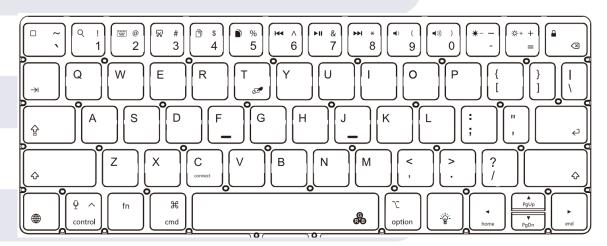



# Function shortcut keys fn+

Home key

Pause/Play

Search Next song

Virtual keyboard

Volume reduction

Screenshot Volume increase

© s Brightness reduction

Past

Past

Brightness increase

Previous song Lock screen

# Special instructions for some function buttons

01.  $\begin{bmatrix} fn \end{bmatrix} + \begin{bmatrix} T \end{bmatrix}$  Turn on/off touch function  $\begin{bmatrix} fn \end{bmatrix} + \begin{bmatrix} \blacksquare @ \\ 2 \end{bmatrix}$  Open Virtual keyboard

02. After turning on the device, press the backlight button for 180 seconds and it will automatically turn off without any operation. To turn it on, press the

Dimming the light Add lighting + Add lighting +

Press twice Turn on the running light.

Switch seven color backlight key.

O3. 

The page down 

The page up

04. Switch input language

05. + Other buttons can produce some uncommon special characters.

O6. Select All  $\frac{\Re}{\operatorname{cmd}} + A$  Copy  $\frac{\Re}{\operatorname{cmd}} + C$ Paste  $\frac{\Re}{\operatorname{cmd}} + V$  Shear  $\frac{\Re}{\operatorname{cmd}} + X$ 

O7. (Case switching) After connecting to the iPad, open the settings on the iPad — General — Keyboard — Physical keyboard — Close Use the Caps Lock key to switch languages.

08.  $\frac{9}{\text{control}}$  Click twice in a row to open voice input.



# Product characteristic

- Can achieve wireless connection, more convenient operation without password.
- Ultra lightweight design concept, easy to carry.
- The keyboard has an energy-saving sleep function.
- Equipped with touchpad function, making operation and use more convenient.
- Power indicator function.

# Product parameters

- 1. Operating distance: 10 meters
- 2. Modulation system: GFSK
- 3. Working voltage: 3.3 4.2V
- 4. Charging current: < 250 mA
- 5. Standby time: 90 days
- 6. Lithium battery capacity: 500 mAh
- 7. Continuous working hours:
  - with backlight < 5/h,
  - typing without touch < 220/h,
  - typing with touch < 90/h.
- 8. Charging time: < 3 hours
- 9. Charging temperature: 0 45°C

The content of this manual and the specifications of this product are subject to change without prior notice.

⚠ Attention: To operate this product correctly, please read the user manual carefully.